 
 
 
 
 
 
 
 
 
 


 
 
 
 
 
Spare parts of Stihl MS170 & MS180

 MS170,180,230 A2	 MS170,180 A5	 MS170,180,230 A6	 MS170,180,230 A7	 MS170,180,230 A8	 MS170,180,230 A12
 MS170,180 A13	 MS170,180 A14	 MS170,180 A15	 MS170,180 A17	 MS170,180 A18	 MS170,180 A19
 MS170,180,230,380 A20	 MS170,180 A21-24	 MS170,180 A22	 MS170,180 A25	 MS170 B1	 MS170 B2
 MS170 B3	 MS170 B4	 630 MS170 B5	 MS170,180 B7	 MS170,180,230 B8-9	 MS170,180,230 B10
 MS170,180 B11	 MS170,180,230 B13	 MS170,180,230 C1	 MS170,180 C2-4	 170,180 D2	 MS170,230 D3
 MS170,230 D4	 MS170,230 D5	 MS170,180,230 D6	 MS170,230 d7	 MS170,180,230 D8	 MS170,180,230,380 D9
 MS170,180,230 D17	 MS170,180 D18-28	 MS170,180 D25	 MS170,180,230 E1	 MS170,180,230 E2	 MS170,180,230 E3
 MS170,180,230 E4	 MS170,180,230 E5	 MS170,180,230 E3-6	 MS170,180,230 E7	 MS170,180,230 E9	 MS170,180 E10-11

 
 
 
 
 MS170,180,230 E14	 MS170,180,230 E15	 MS170,180,230 E16	 MS170,180,230 E17	 MS170,180,230 E18	 MS170,180,230 E19
 MS170,180 E20	 MS170,180,230 E21	 MS170,180 E22	 MS170,180,230 E23	 MS170,180,230 E25	 MS170,180,230 E26
 MS170,180,230 E26-1	 MS170,180 E27	 MS170,180,230 E29	 MS170,180,230 F13	 MS170,180,230 F16	 MS170,180 F17
 MS170,180 G1	 MS170,180 G2	 MS170,180 G3	 630, 632 G4	 MS170,180 G5	 MS170,180 G6
 MS170,180 G7	 170,180 G12	 MS170,180 G14	 MS170,180 H1	 MS170,180 H2	 MS170,180,230 H4
 MS170,180,230 H5	 MS170,180 H6	 MS170,180 H7	 MS170,180,230 H8	 MS170,180 H9	 MS170,180 H10
 MS170,180,230 H12	 MS170,180,230 H13	 MS170,180 A1	 630,632 A16	 180 B6	 630 B12
 630 B15	 630 D1	 630 D14	 630 D16	 MS170,180 E28	 630,640 F14
 180 G8-9	 MS170,180 B1	 MS180 B2	 MS180 B3	 MS180 B4	 MS180 B5

Spare parts of Stihl MS230&MS250

 
 
 Cylinder 40mm MS230,250 A1	 Piston 40mm MS230,250 A4	 Piston ring 40mm MS230,250 A5	 Piston pin MS230,250 A6	 Snap ring C10 640, 645 MS230,250 A7	 Grooved ball bearing 6202 MS230,250 A12
 Oil seal 15x25x5 MS170,180,230,250 A13	 Circlip H15x1 MS170,180,230,250 A14	 Engine pan MS230,250 A15	 Spark plug Bosch WSR 6F MS170,180,230,250 A18	 Valve MS230,250 C3	 Flat spring MS170,180,230,250 C4,F3
 Collar screw MS170,180,230,250 C5	 Annular buffer MS230,250 C7	 Annular buffer MS170,180,230,250 C9	 Plug MS170,180,230,250 C10	 Tension nut MS170,180,230,250 C11	 Chain adjusting screw MS170,180,230,250 C12
 Cover MS170,180,230,250 C13	 Hose MS230,250 C28	 Pickup body MS170,180,230,250,380 C29	 Bumper spike MS170,180,230,250 D13,F31	 Screwdriver IS-5x120x70 MS170,180,230,250 D15	 Hose MS230,250 E1
 Oil Pump MS170,180,230,250 E4	 Connector MS230,250 E5	 Worm MS170,180,230,250 E8	 Spring MS170,180,230,250 E9	 Clutch assy MS170,180,230,250 E10-1	 Carrier MS170,180,230,250 E10
 Clutch shoe MS170,180,230,250 E11	 Retainer MS170,180,230,250 E12	 Spring MS170,180,230,250 E13	 Needle cage 10x13x10 MS170,180,230,250 E14	 Chain sprocket 3/8" 7T" MS230,250 E15	 Washer MS170,180,230,250 E16
 E18 E-clip 8x1.3 MS170,180,230,250 E18	 Hand guard 640,645 MS230,250 F1	 Lever MS170,180,230,250 F2	 Contact spring MS170,180,230,250 K13	 Washer MS170,180,230,250 F4	 Strap MS170,180,230,250 F5
 E-clip MS170,180,230,250 F6	 Brake band MS170,180,230,250 F7	 Brake spring MS170,180,230,250 F8	 Cover MS230,250 F9	 Bumper strip MS230,250 F11	 Screw M5x65 MS170,180,230,250 F17

 Cooling Plate MS230,250 F18	 Muffler 640, 645 MS230,250 F20-23	 Collar nut M8 MS170,180,230,250 F30	 Collar nut M8x1 MS170,180,230,250 G2	 Ignition system complete MS230,250 G3-9,G6,G10-18	 Bushing MS170,180,230,250 H3
 Rewinding spring MS170,180,230,250 H4	 Rope rotor MS170,180,230,250 H5	 Start grip MS170,180,230,250 H6	 Start rope 3mm MS170230,250 H7	 Pawl MS170,180,230,250 H10	 Washer MS170,180,230,250 H11
 Spring MS170,180,230,250 H12	 Shim MS230,250 J1	 Gasket MS230,250 J2	 Carburetor 640,645 J3	 Choke lever MS230,250 J10	 Throttle trigger MS230,250 K3
 Safety throttle lock MS230,250 K4	 Torsion spring MS170,180,230,250 K5	 Cylindrical pin MS230,250 K6	 Collar screw MS170,180,230,250 K11	 Plug MS170,180,230,250 K12	 Handle molding MS230,250 K14
 Annular buffer MS230,250 K15	 Throttle rod MS230,250 K16	 Manifold MS230,250 K18	 Baffle plate MS230,250 K20	 Self-tapping screw IS-ST4, 2X19 MS170,180,230,250 K24	 Handlebar MS230,250 K26
 Screwdriver MS170,230,250 O3	 Tool roll MS170,230,250 O4	 Crankshaft 640,645 A9-11	 Screw M5x35 640,645 A16	 Woodruff key 640,645 A19	 Engine housing 640,645 C1-2
 Filler cap complete 640,645 C20-23	 Sealing ring 640,645 C21	 Tank vent 640,645 C26-27	 Guide bar 640,645 D16	 Pickup-body MS170,230,250 630,640,645 E2	 Self-tapping screw 4.2x19 640,645 F7,F32,G14
 Bushing, Sleeve 640,645 F12-14	 Gasket MS170,230,250 F19	 Nut M5 630,640,645 F27,J9	 Chain sprocket cover 630,640,645 MS170,230,250 F29	 Flywheel 640,645 G1	 Fan housing with rewind starter MS170,230,250 H1

 
 
 
 
Spare parts of Stihl MS230/250/290/070

Self-tapping screw 4.8x20  630,640,645 H13,F15,G7	Grommet  640,645 J4	Filter housing  640,645 J5	Part of air filter  640,645 J6	Part of air filter  640,645 A7	Carburetor box cover  640,645 A12	
Twist lock  640,645 J12	Handle housing  640,645 K1-2	Contact spring  640,645 K13	Impulse hose  640,645 K19	Shutter  640,645 K21	Switch shaft  640,645 K23	
Cylinder Ø42.5mm  MS250 A1	Piston  MS250 A4	Piston ring  MS250 A5	Piston pin  MS250 A6	Snap ring C10  MS250 A7	Guidebar  MS250 A8	Saw chain  MS250 A9

 
 
Spare parts of Stihl MS290

 
 
 
 
 
air filter 	carburetor 	carburetor box cover 	chain sprocket 	chain sprocket cover 	clutch 
collar screw 	collar screw 	crankcase 	crankshaft 	filler cap 	flywheel 
fuel hose 	handle guard 	handle housing 	handlebar 	ignition coil 	muffler 
oil pump 	rewind spring 	cover 	engine pan 	handle molding 	spring 

Spare parts of Stihl MS070

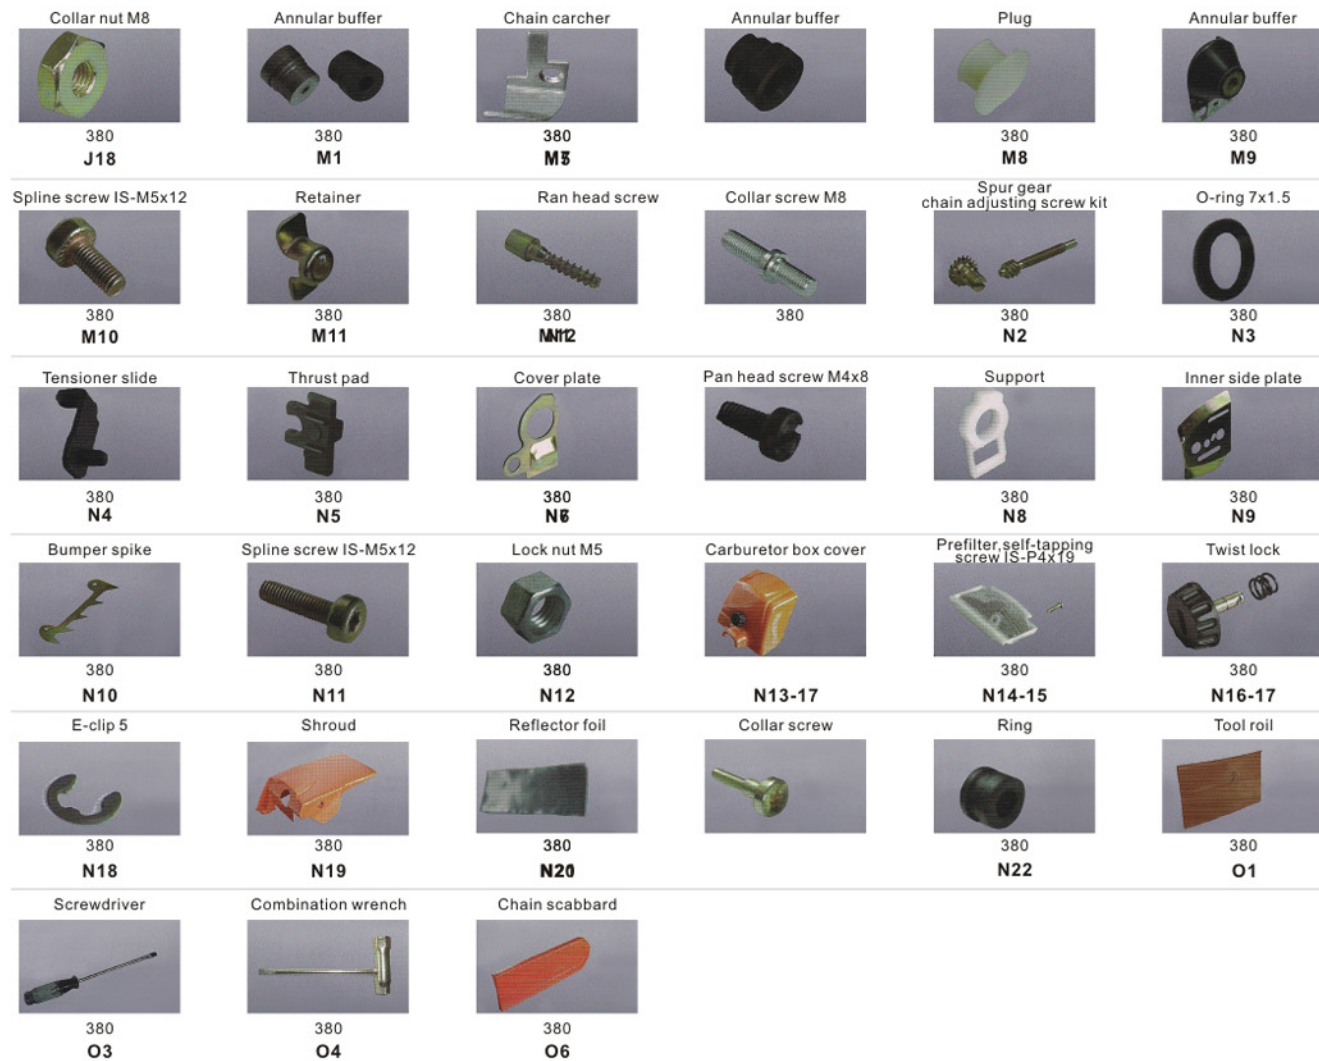 
crankshaft 	filler cap 	needle cage 15x19x19.5 	cylinder Ø58mm 	piston Ø58mm 	piston ring Ø58mmx1.5mm 
piston pin 	snap ring 15 	spark plug 	spark plug boot 	Exhaust muffler 	rewind starter complete 
rewind spring 	rope rotor 	starte rope Ø 4.0mm 	starter grip 	pawl 	washer 
spring 	ignition coil complete 	ignition coil 	set of points 	capacitor 	flywheel 
fanwheel 	inner side plate 	chain sprocket 0.404"7T 	clutch 	chain sprocket cover 	bumper spike 
outer side plate 	intake elbow 	chain sprocket 0.404"7T 	rim sprocket 0.404"7T 	oil pump 	oil tank cover 
fuel filter 	rear handle 	suppotr 	shroud 	handlebar with hose 	cover 

Spare parts of Stihl MS380

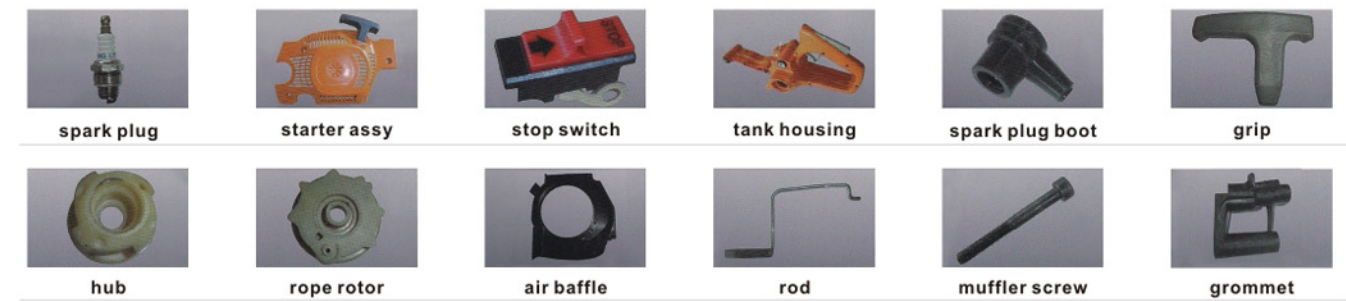 
 380 A1-11	 380 A2	 380 A8	 380 A9	 380 A10	 380 A11
 380 A12	 380 A13	 380 A14	 380 A14,15	 380 A16	 380 A17
 380 A18	 380 A19	 380 A21	 380 B1	 380 B2	 380 B3
 380 B4	 380 B5	 380 B6	 380 B8	 380 B9	 380 B10
 380 B11	 380 B12	 380 B13	 380 C1-4	 380 C4	 380 D
 380 D1	 380 D17	 380 E1	 380 E2-4	 380 E2	 380 E3
 380 E4	 380 E5	 380 E6	 380 E7	 380 E8	 380 E9
 380 E10	 380 E11	 380 E12	 380 E13	 380 E14	 380 E15

 380 E16	 380 E17	 380 E18	 380 E19	 380 E20	 380 E21
 380 E22	 380 E23	 380 E24	 380 E29	 380 E30	 380 F1
 380 F2	 380 F3-6,9-14	 380 F7	 380 G1-15	 380 G9-11	 380 G1
 380 G3	 380 G2	 380 G6-7	 380 G8	 380 G12	 380 G14
 380 H	 380 H3	 380 H4,11	 380 H5-6	 380 H9-10	 380 H12
 380 H14	 380 H16	 380 H18-19	 380 H20-21	 380 H22	 380 H23
 380 H24	 380 H25	 380 J1	 380 J2	 380 J3	 380 J4-10
 380 J6-7	 380 J12-13	 380 J14	 380 J15	 380 J16	 380 J17

Spare parts of Stihl MS380 & Husqvarna EH142/268/365



Spare parts of Husqvarna EH142



Spare parts of Husqvarna EH268



Spare parts of Husqvarna EH365

